

Chelino



PLATINUM



TRANSPORTER

CHELINOBABY GROUP OF COMPANIES.
NO. 12 KIMBERLITE ROAD, THETA EXT 5, BOOYSENS RESERVE, JHB, 2091.SA.
Tel: +2711 8352520

www.chelinobaby.co.za



Thank you for choosing Chelino Platinum. Read the instruction manual carefully before using and keep the manual well for future reference. this stroller conforms to EN1888:2012

Read these instructions carefully before use and keep them for future reference. Your child's safety may be affected if you do not follow these instructions.

WARNINGS!

Failure to follow these warnings and the assembly instructions could result in serious injury or death.

- Please save owner's manual for future use.
- Adult assemble required.
- Never leave child unattended. Always keep child in view while in stroller.
- "Warning: It may be dangerous to leave your child unattended."
- "Warning: This product is not suitable for running or skating."
- Avoid serious injury from falling or sliding out. Always use seat belt. After fastening buckles, adjust belt to get a snug fit around your child.
- Child may slip into leg opening and strangle. Never use seat in a reclined carriage position unless the straps are fastened to close off the leg opening.
- Avoid finger entrapment: Use care when folding and unfolding the stroller. Be certain the stroller is fully erected and latched before allowing your child near the stroller.
- Never use stroller on stairs or escalators. You may suddenly lose control of the stroller or your child may fall out. Also, use extra care when going up or down a step or curb.
- Avoid strangulation. Do not place items with a string around your child's neck, suspend strings from this product, or attach strings toys.
- Use of the stroller with a child weighing more than 15kg will cause excessive wear and stress on the stroller.
- "Warning: Use the stroller with only one child at a time."
- "Warning: The vehicles shall be used only for up one child."
- To prevent tipping do not hang any bags or other object on the stroller's handles. Do not place objects exceeding 0.45kg in weight in the canopy pocket.
- To avoid burns, never put hot liquids in the parent's tray.(If have)
- To prevent a hazardous, unstable condition, never place purses, shopping bags, parcels or accessory items on the handle or canopy.
- To prevent a hazardous, unstable condition, do not place more than 3kg in the storage basket
- Do not use storage basket as a child carrier.
- Do not allow your child to stand on the basket. It may collapse and cause injury.
- Never place child in the stroller with head toward front of stroller.
- Never allow your stroller to be used as a toy.
- Stroller to be used only at walking speed. Product not intended for use while jogging, skating, etc.
- Discontinue using your stroller when it become damaged or broken.
- Use a harness as soon as your child can sit unaided.
- Always use the crotch straps in combination with the waist belt.
- Warning: When it is not used, the stroller must be kept away from the reach of children.
- This vehicle is intended for use for children aged from 6 months to 36 months of age, and weighing up to 15 kg.
- A statement that accessories which are not approved by the manufactory shall not be used.

Your stroller



A) Handle

G) Front wheels

B) Canopy

H) Folding button

C) Front bumper bar

I) 2nd safety lock of folding

D) Harness

J) Adjustable harness on seat back

E) Rear wheels

K) Basket

F) Swivel lock

L) Brake

How to unfold the stroller

1. Lift up folding lock lever and open the frame.(FIG.1)
2. Push 2nd safety folding lock & button to unfold stroller.(FIG.2&3)



FIG.1

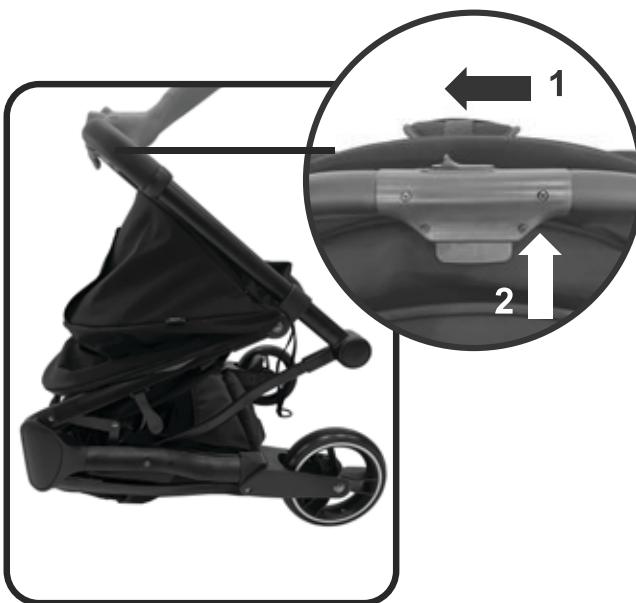


FIG.2



FIG.3

How to attach the front wheels

Slide mounting pins into the wheel housing until they lock into place.(FIG.4 &5)

ATTENTION: make sure the wheels are properly attached by lightly tugging on the wheel.



FIG.4



FIG.5

How to operate the front bumper

To apply the front bumper, click the front bumper into the plastic housing on both side and make sure it is fixed into the right position. (FIG.6)

To remove the front bumper, press the buttons located at the bottom sides of the bumper bar and pull it out. (FIG.7)



FIG.6



FIG.7



How to operate rear wheels brake

WARNING!

Always apply BOTH BRAKES whenever the stroller is stationary.

Never leave your child unattended. Never leave the stroller on asloped surface with a child in seat, even with the brakes applied.

To apply the brake, press the rear brake pedal down firmly.(FIG.8)

Test the brake is engaged correctly by trying to push the stroller forwards for a short distance.



FIG.8

How to operate the front bumper

To release the brake, lift the brake pedal to unlock the rear wheels.(FIG.9)

WARNING:

Always apply brake before loading or unloading a child.



FIG.9

How to adjust seat position

To pull up & down to adjust the harness on seat back to adjust the reclined seat at any position (FIG.10&11&12)



FIG.10



FIG.11

FIG.12

How to operate safety harness

To release the safety buckle, press the button in the center of the buckle and pull the belt to open.(FIG.13&14)



FIG.13



FIG.14

To apply the safety buckle, insert the two latches into the buckle on both sides until they click for locking.(FIG.15 & FIG.16)



FIG.15



FIG.16

Pull the belts up and down to adjust the belts. Carefully adjusted on each side so the harness fits your child comfortably. (FIG.17)



FIG.17

How to operate front wheels

To lock and fixed the wheel direction, push down the locking button.(FIG.18)

To unlock and use swivel wheels, lift up the locking button.(FIG.19)



FIG.18



FIG.19

How to remove the wheels

To remove the front wheels, press the release button on the side of the wheel housing and pull down the front wheels.(FIG.20)



FIG.20

How to operate front wheels

Press the adjustment plastic located at the center bottom footrest and adjust it to the required position.(FIG.21)



FIG.21

How to remove the seat cover if you need

1. Open canopy zip (FIG.22)
2. To take out the canopy plastic hooks from both sides (FIG.23)
3. Take out the elastic strips from both sides (FIG.24)
4. To take out the canopy plastic strips from both sides (FIG.25)
5. To take out the velcro from both sides (FIG.26)
6. To release the belts from both sides (FIG.27)
7. To release the buckle from back seat (FIG.28)
8. To release the seat cover from foot rest (FIG.29)
9. To release the velcros from back seat, then the whole seat cover can be removed (FIG.30)



FIG.22



FIG.23



FIG.24



FIG.25



FIG.26



FIG.27



FIG.28



FIG.29



FIG.30

WARNING!

- 1) To reassemble the seat cover, the belt must be passed through the 2 seat wing holes, then fix on the chassis (FIG.31)
- 2) Remind to take out the PE board from seat cover before wash (FIG.32)



FIG.31



FIG.32

How to fold stroller

WARNING!

When closing the stroller, ensure that your child, or other children are kept at a safe distance. Ensure that during these operations the moveable parts of the stroller do not come into contact with your child. Before closing the stroller, ensure that the storage basket is empty.

Follow the steps as below picture shown. (FIG.33&34&35&36&37)



FIG.33



FIG.34



FIG.35



FIG.36



FIG.37

Care and Maintenance

The cleaning and maintenance of this product must be carried out on a regular basis by the user.

The cleaning and maintenance of the stroller must only be carried out by an adult.

CLEANING

Clean the fabric parts with a damp sponge and neutral detergent. Please refer to the product's care label.

Routinely wipe clean plastic parts with a soft damp cloth.

Always dry the metal parts to prevent the formation of rust if the stroller has come into contact with water.

MAINTENANCE

Lubricate the moving parts only if necessary, with a light application of a silicone based lubricant.


Routinely check the condition of the wheels and all moving parts. Keep them free from dust, dirt or sand. To avoid friction, that may prevent the correct use of the stroller, ensure that all the movable plastic parts located along the keep the stroller in a dry place.

Dimension Info



LENGTH	85.5 CM	FOLDABLE LENGTH	56 CM
WIDTH	47 CM	FOLDABLE WIDTH	47 CM
HEIGHT	103 CM	FOLDABLE HEIGHT	23.5 CM

WEIGHT 7.7 KGS

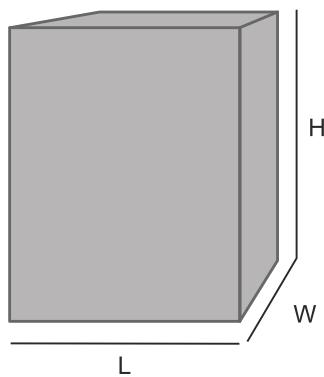

CARTON LENGTH	51 CM
CARTON WIDTH	26 CM
CARTON HEIGHT	60 CM

Safety hints \ Instructions of use \ Warranty & Gaurantee guidelines

Please read this User Guide thoroughly before using this product. If you are not sure on any point in this guide please consult with the sales person whom sold you this product or contact Chelino on 0118352520. Our offices hours are Monday to Thursday from 9:00 am to 13:00 pm and 14:00 pm to 16:30 pm and Fridays from 9:00 am to 12:00 pm and 14:00 pm to 16:30 pm. Our offices are closed on Saturdays, Sundays, Public holidays and for three weeks during the December/ January festive season. We are situated at 12 Kimberlite Road, Theta Ext, Booysens Reserve, 2091, Johannesburg, Gauteng, RSA.

To avoid suffocation or swallowing or any other illness, please keep all packaging which have been removed from parts wrapped in the box away from infants, toddlers, children or any other living being. Please carefully dispose of the unwanted packaging once this product is fully assembled and you are satisfied with your purchase. Please make sure that you are entirely satisfied with your purchase before removing the warning card attached to this product and before using this product. Once the warning card has been removed and if this product has been used we will not accept the return of this product.

If you are not entirely satisfied with this product purchased, please disassemble this product and re-pack it in the original packaging and return it to the store you purchased it from together with the proof of purchase. Depending on the stores policy, you will either be entitled to a replacement product, a credit voucher or a refund. This depends on the stores policies.

If you are not entirely satisfied with the assemble of this product or if you are not 100% sure that you have assembled this product correctly, please take this product back to the store you purchased it from and request for some assistance in checking if the assembly is correct or get this product assembled. Depending on the store's policy, there could be an extra charge for this service. Chelino will not take any responsibility if this product is incorrectly assembled thus causing any sort of injury to the user or the child. Alternatively you can contact Chelino directly on 0118352520, our offices hours are Monday to Thursday from 9:00 am to 13:00 pm and 14:00 to 16:30 pm and Fridays from 9:00 am to 12:00 pm and 14:00 pm to 16:30 pm. Our offices are closed on Saturdays, Sundays, Public holidays and for three weeks during the December/ January festive season. There is a charge for the assembly of any product. If you require a Chelino representative to assemble this product you will have to bring this product to our offices which are situated at 12 Kimberlite Road, Theta Ext, Booysens Reserve, 2091, Johannesburg, Gauteng, RSA.

Please note, that any repair which will needs to be made to this product must be done at the Chelino workshop which is situated at 12 Kimberlite Road, Theta Ext, Booysens Reserve, 2091, Johannesburg, Gauteng, RSA. Our offices hours are Monday to Thursday from 9:00 am to 13:00 pm and 14:00 pm to 16:30 pm and Fridays from 9:00 am to 12:00 pm and 14:00 pm to 16:30 pm. Our offices are closed on Saturdays, Sundays, Public holidays and for three weeks during the December/ January festive

season. We do not provide any loan\courtesy products while your product has been sent in for repairs. Chelino requires 7 working days to repair any product, but this lead time may vary depending on the transportation of the product too and from yourself. Once the warranty card is detached from this product and once this product is used even if used once and if there is a fault, this product will need to be sent to the Chelino Workshop for the repair and no refund\credit\exchange will be allowed. Only a Chelino representative can decide whether the product needs to be replaced\credited\exchanged.

Once you are satisfied with the assembly of this product and have read this instruction and agree to the terms stated and are ready to use this product, please ensure that all safety locks are engaged to ensure safe use of this product.

Please ensure that the child is always securely strapped into this product at all times. The seat belts must be properly adjusted to keep the child secured. If the seat belt is too loose the child could fall out thus causing injury. If the seat belts are too tight it will cause injury and aggravation to the child.

Never leave the child unattended or without parent\guardian supervision while in this product, as injury could be caused by other parties intentionally or unintentionally.

This product can be knocked over and the child can be injured.

Never lift this product while the child is in it. This can cause this product to fold and thus causing injury to the child seated in this product. When confronted with a staircase, no matter how many steps there are, please use the alternatives such as an elevator\lift or ramp or remove the child from this product before using the staircase. Never allow the child to stand on the seat of this product. This can cause this product to fold and thus causing injury to the child. The child can also fall out of this product causing injury to him\herself. This can also cause damage to structure of this product. This product is designed for the use of only one child. This product cannot accommodate more than one child.

Always engage the brake when you are not using this product. Please note, by applying the brake one still cannot leave the child unattended and without parent supervision. If the brake is not engaged properly the product will move.

Take special care when adjusting the backrest if the child is seated in this product. It is preferred to select the desired backrest position before seating the child this product.

Prevent and do not allow any child to climb into this product or hang onto the handle bars or any other part of this product. This imbalance of weight can cause this product to topple thus causing injury.

Do not hang or place any diaper bag or shopping bags or any other item over the handle bars or canopy of this product. This weight can cause damage to this product and also cause this product to fold or topple.

Storage trays\storage compartments\cup holders are there for convenience and are

not suitable for holding large amounts of liquids (hot or cold) or heavy objects. These areas are also not waterproof or leak proof and spillage can occur.

The storage basket situated underneath the seat can hold a maximum weight of 3kgs. Do not place any items heavy than 3kgs and items which do not fit in this basket as this will hamper the performance of this product.

This product is fit to carry a child weighing no more than 15kgs.

This product was designed to be used on smooth surfaces and in average weather climates. Do not use this product on rough terrains and uneven surfaces and in extreme weather conditions. Using this product in the undesired terrains and weather conditions can cause serious damage to this product and to your child.

Chelino takes no responsibility and will not be held liable for any damage or injury caused by using this product or if this product is used for any other purposes other than its intended purpose.

Please note, there are no warranties or guarantee on any fabrics or sponge grip handles used on this product.

Note



Stores: ChelinoBaby – Ormonde – JHB
ChelinoBaby – Fourways – JHB
ChelinoBaby – Woodmead Square – JHB
ChelinoBaby – Greenstone – JHB
ChelinoBaby – Menlyn – Pretoria
ChelinoBaby – Kolonnade – Pretoria
ChelinoBaby – Centurion – Pretoria
ChelinoBaby – Gateway – Durban
ChelinoBaby – Online – www.chelinobaby.co.za



Imported for :
ChelinoBaby Group of Companies.
No. 12 Kimberlite Road , Theta Ext 5 ,
Booysens Reserve , JHB , 2091. SA.
Tel: +2711 8352520
Info:info@chelinoplatinum.co.za